

ROAM R41


Quick Start Guide




KIT#:

R41-9B-001	R41-YB-001
R41-9B-002	R41-YB-002
R41-9B-003	R41-YB-003


Included In the Box



Main Unit




Automobile Auxiliary
Power Adapter



Mobile Donor Antenna*



Server Antenna*

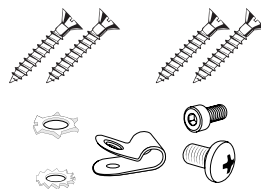

Mounting Hardware




Ground Cable

Quick Installation

IMPORTANT: Your **CEL-FI GO G41** is electronic equipment. The **CEL-FI GO G41** must be kept indoors and in a dry, cool, well ventilated area.

1


Install Donor Antenna

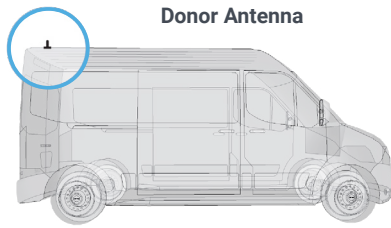

Mount your **Donor Antenna** on the exterior and towards the rear of your automobile or boat, depending on the design and type of vehicle. Make sure you consider the cable connection to the **Main Unit** with your location choice. **Note:** For best performance, ensure there is 50 cm of metal around the base of the antenna.

2

Install the Server Antenna

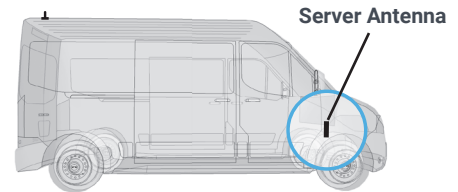


Install the **Server Antenna** in the cabin/deck towards the front of the vehicle where coverage is needed. Make sure to mount the **Server Antenna** horizontally.

Note: The **Donor Antenna** should be separated/isolated as far away as possible from the **Server Antenna**, greater separation provides the best performance.

3


Select the Main Unit Location

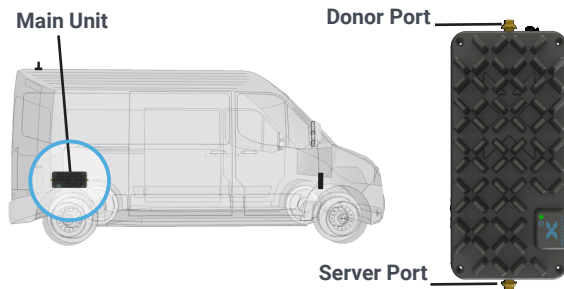

Find a suitable location to securely mount the **Main Unit**. When installed, the **Main Unit** should have airflow and be in a position that doesn't contact other objects. Make sure the location provides enough distance for all the cables to connect. It's best to ensure all cables reach desired locations **BEFORE** mounting the device.

4


Attach Server and Donor Antennas

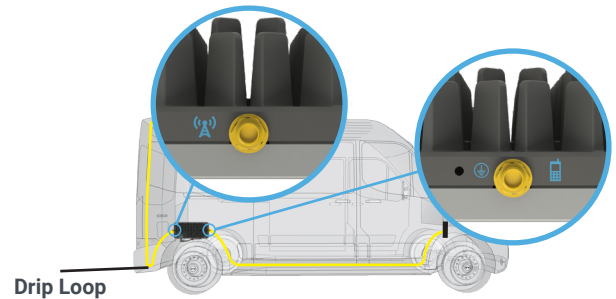

Attach the **Donor Antenna** and **Server Antenna** to the **Main Unit**. **Note:** Adding a drip loop to the **Donor Antenna** cable is crucial as it prevents water from flowing down the cable and damaging the Main Unit's electronic equipment.

5


Install Ground Cable

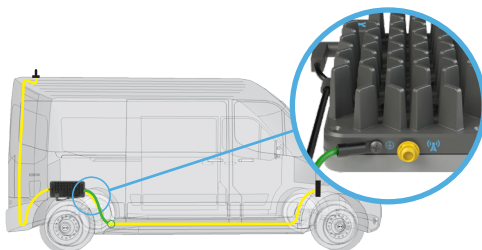

Using the provided M3 screw, attach one end of the ground cable to the **Main Unit** and the other end to the chassis of the automobile or boat.

6

Plug in the Main Unit

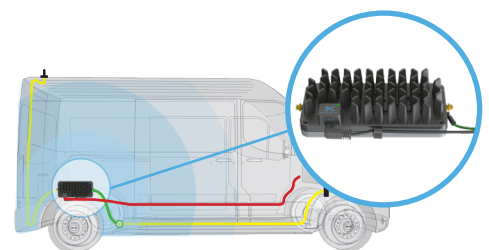

Using the provided M3 screw, attach one end of the ground cable to the **Main Unit** and the other end to the chassis of the automobile or boat.